

# 11Mbps Wireless LAN PC Card

## Quick Installation Guide

WLC010

This *Quick Installation Guide* only provides you with the basic instructions. For more detailed information, please refer to the *Manual* file on the provided CD. All other product names and trademarks in this document are trademarks of their respective companies.


### A. Hardware Installation

#### System Requirements

- . Windows 98(SE)/Me/2000/XP
- . 16 MB of RAM, additional memory recommended
- . Available (Type II) PC card slot

#### Installing the Hardware

1. The Wireless LAN Card can be inserted into your computer's PCMCIA slot when the computer power is either turned on or off.
2. When the Wireless LAN Card is inserted into the PCMCIA slot and the computer is turned on, a red LED will light up.
3. After installing the hardware, install the device driver and then install the Wireless LAN Card software.

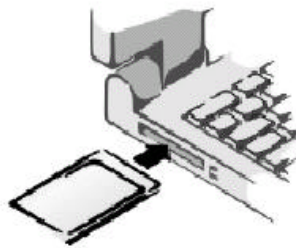

### B. Driver Installation

After installing the hardware, the Windows will detect the new device and displays the wizard. Follow the steps below to install the driver.

#### For Windows 98(SE)

1. When the wizard appears, click **Next**. Then select **Search for the best driver.** and click **Next**.
2. Insert the Installation CD into your CD-ROM drive. Check **Specify a location** and click **Browse** to specify the path to **D:\Driver\Win9x** where D is the CD-ROM drive letter and click **Next**.
3. When the driver is found, click **Next** to continue.  
**NOTE:** If prompted, insert your Windows 98 installation CD and then click **OK**.
4. Click **Finish** to complete the driver installation.
5. When prompted to restart your computer, click **No** and continue to the next task.

#### For Windows Me

1. When the wizard appears, select **Specify the location.** And click **Next**.
2. Insert the Installation CD into your CD-ROM drive Select the check boxes for both **Search for the best driver** and **Specify a location.** Click **Browse** to specify the path to **D:\Driver\WinME** where D is the CD-ROM drive letter and click **Next**.
3. When the driver is found, click **Next** to continue.
4. Click **Finish** to complete the driver installation.

#### For Windows 2000

1. When the wizard appears, click **Next**.
2. Insert the Installation CD into your CD-ROM drive. Select **Search for a suitable driver.** and click **Next**.
3. Check **Specify a location** and click **Next**.
4. Click **Browse** to specify the path to **D:\Driver\W2K** where D is the CD-ROM drive letter. and click **Open.** and click **OK**.
5. When the driver is found, click **Next** to continue.
6. When the **Digital Signature Not Found** message appears, click **Yes**.
7. Click **Finish** to complete the driver installation.

#### For Windows XP

1. When the wizard appears, select **Install the software automatically (Recommended).**
2. Insert the Installation CD into your CD-ROM drive and click **Next**.
3. Click the file under **Location** called **d:\driver\winxp\netcw10.inf.** (where D is the CD-ROM drive letter) and click **Next**.
4. When the **Hardware Installation** message appears, click **Continue Anyway.**
5. Click **Finish** to complete the driver installation.

## C. Installing the Wireless LAN Card Software

1. Close all Windows programs that are running.
2. Run **Setup.exe** from the **D:\Utility** folder of the Wireless LAN Card Installation CD-ROM where D is the CD-ROM drive letter, and click **Next**.
3. Click **Yes** to accept the Software Licensing Agreement.
4. In the **SSID** box, enter the **Service Set ID** name of your wireless network, and then click **Next**.
5. Write down the **Service Set ID** name exactly as you have entered it (for use in a later installation step), and then click **OK**.
6. Click the **Infrastructure** if you want your wireless computer to be associated with an access point. Click **Ad-Hoc** if you want multiple wireless computers to network directly with each, and then click **Next**.
7. To install the software to the default destination folder, click **Next**.
8. To install to a different folder, click **Browse** and select another folder.
9. After Windows copies the Setup files from the CD-ROM, click **Yes, I want to restart my computer now**, and then click **Finish**.

## D. Connecting to Other Wireless LAN Systems (Ad Hoc Only)

### Connecting directly to one Wireless LAN Card equipped computers


1. In the systray area, click the **Wireless LAN Link Status** icon to display the **Wireless LAN Configuration Utility** dialog box.
2. Click the **Configuration** tab.
3. In the **Mode** list, click **AdHoc**.
4. In the **SSID** list, select the SSID name of the Wireless LAN group.
4. In the **Tx Rate** list, click **Fully Automatic**.
5. In the **Channel** list, select a channel number the same with the channel number used by the connected computer.
6. Click **Apply Changes**. You should now be able to find your computer on the **Network Neighborhood** in Windows Explorer.
7. Click **OK** if you wish to exit the utility.



## E. Connecting to an Access Point (Infrastructure)

### Connecting your computer to an Infrastructure network

1. In the systray area, click the **Wireless LAN Link Status** icon to display the **Wireless LAN Configuration Utility** dialog box. If the wireless icon does not display in the systray area, click **Start -> Programs -> PRISM 802.11 -> Configuration Utility**.
2. Click the **Configuration** tab.
3. In the **Mode** list, click **Infrastructure**.
4. In the **SSID** list, click or enter the SSID name of the Access Point. All wireless clients must use the same SSID in order to communicate with each other.
5. Click **Apply Changes**. Click on the **Link Info** Page, you will see the status "Associated-BSSID=xx.xx.xx.xx.xx.xx".
6. Click **OK** if you wish to exit the utility.

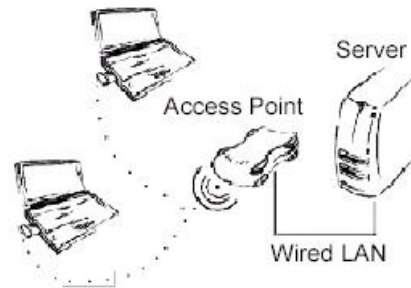

## F. Technical Support

Email: [support@airlinkplus.com](mailto:support@airlinkplus.com)

Web: [www.airlinkplus.com](http://www.airlinkplus.com)